




# How to Replace a Turntable Cartridge, Stylus, and Headshell

Learn how to replace your turntable's headshell, cartridge, and stylus.

Written By: Javier Torres

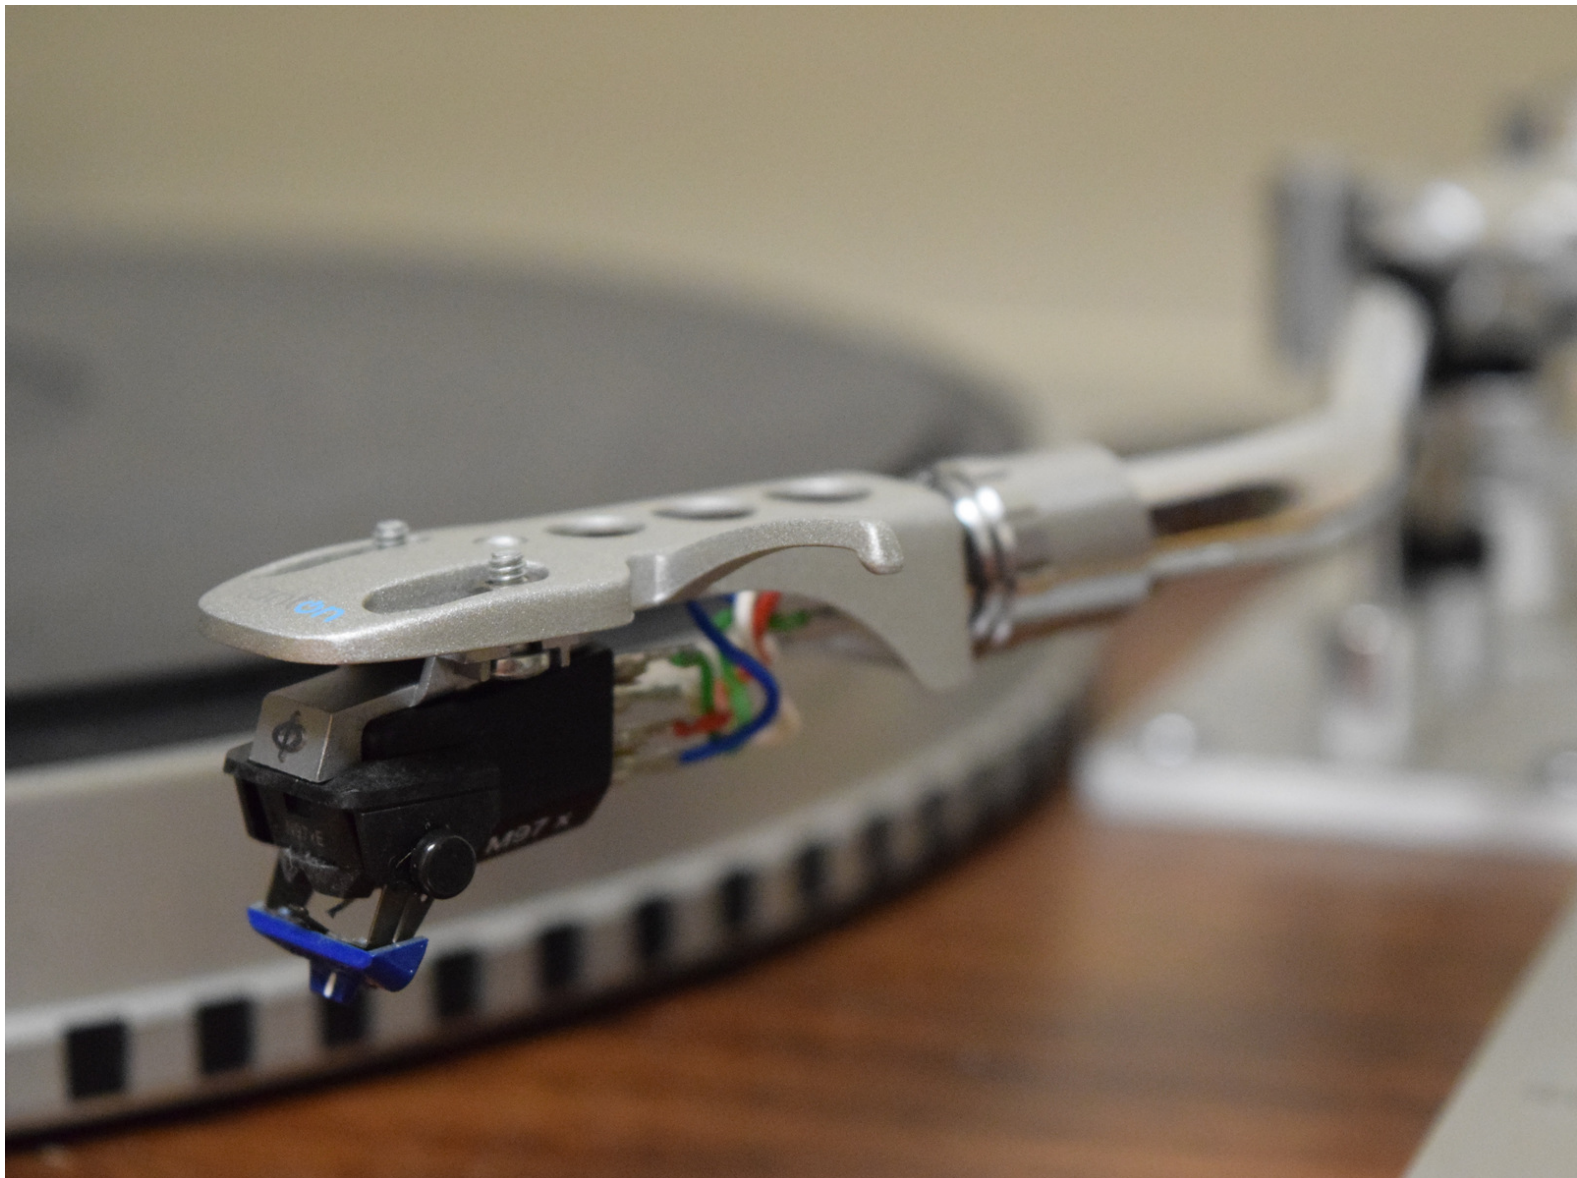

## INTRODUCTION

High quality turntables are only as good as the stylus and cartridge actually playing the records. Learn how to replace these components as they wear out over time.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)



### PARTS:


- [Turntable Stylus](#) (1)
- [Turntable Cartridge](#) (1)
- [Turntable Headshell](#) (1)

## Step 1 — Cartridge, Stylus, Headshell



- Identify headshell by opening the turntable dustcover.


## Step 2

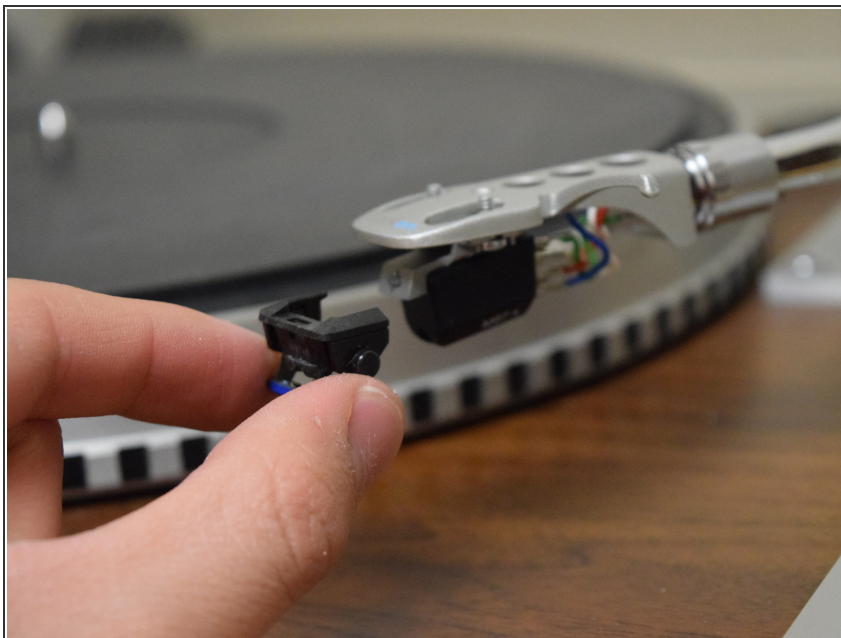

- Remove stylus from cartridge.
- ⚠ Do not pull aggressively as to break the plastic.




### Step 3

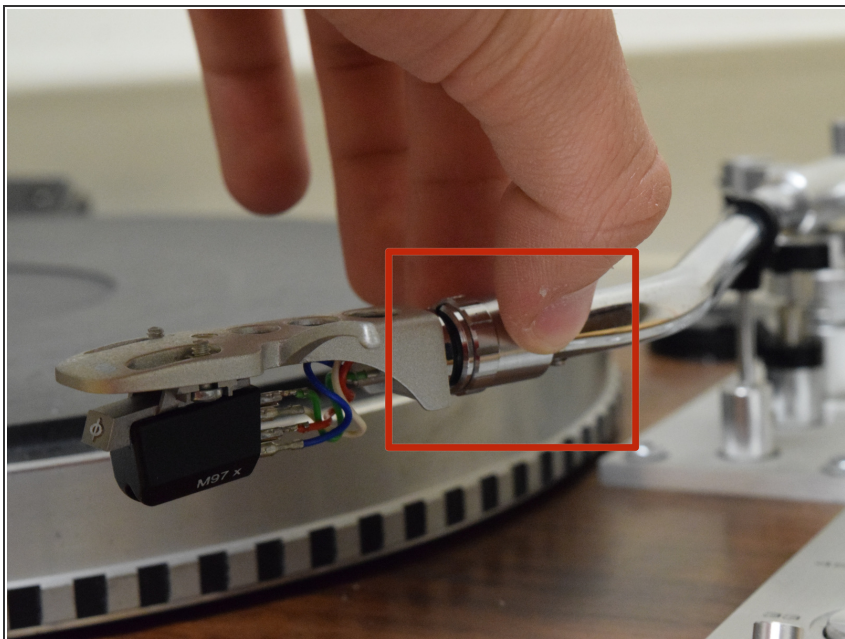


- Turn tonearm nut toward you to release headshell from the tonearm.

### Step 4

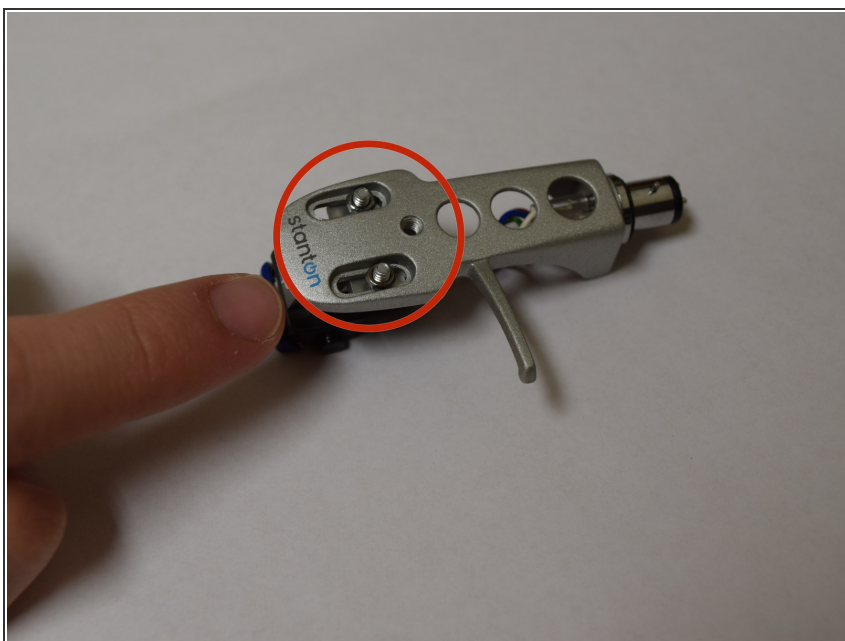


- Remove screws with phillips screwdriver #0 to release the cartridge.
- ⓘ Use standard turntable head screws found at a local audio shop if missing

## Step 5

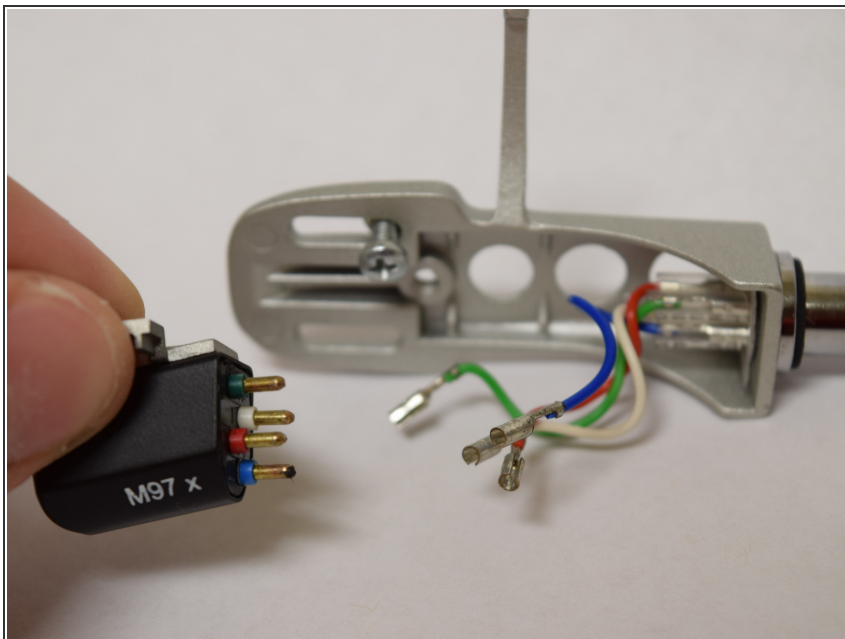


- Unplug wires from pins.

## Step 6

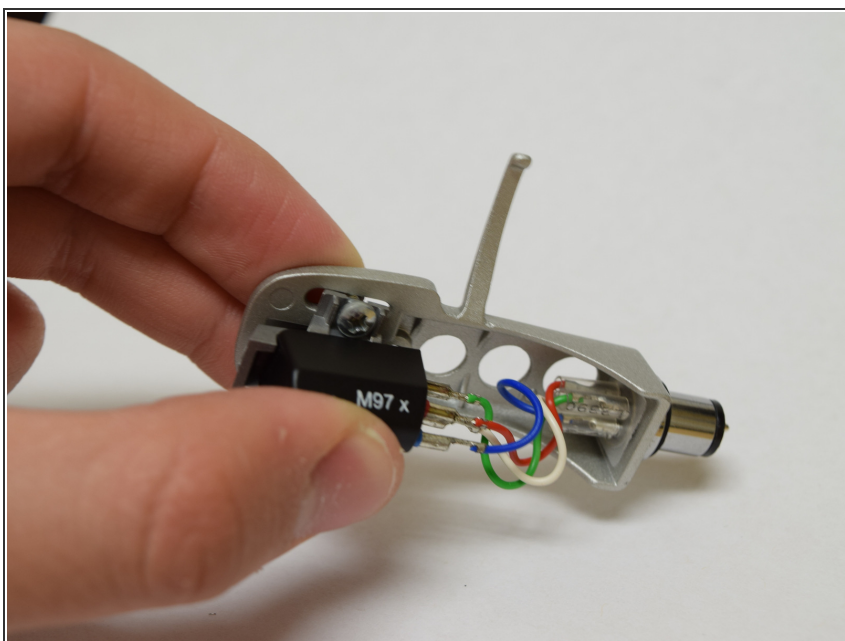

- Replace with new cartridge
- Plug pins in reverse from removal
- ⓘ Pay attention to matching the colors from wire to pin
- Screw cartridge in in the same way it was removed.

## Step 7

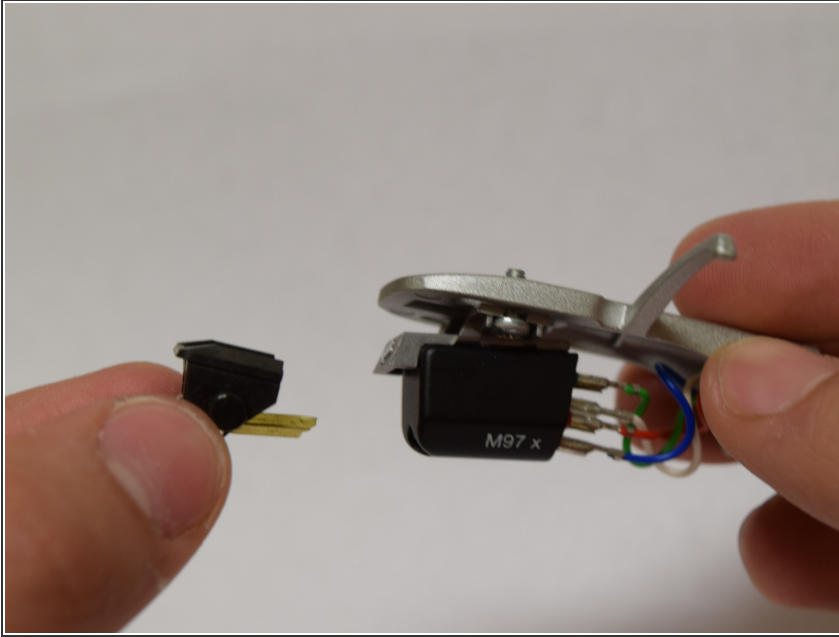

- Insert new stylus into cartridge before mounting headshell

## Step 8



- Screw assembled headshell onto tonearm.

## Step 9



- Test new needle and allow for a break-in period.

---

This document was last generated on 2017-06-19 08:04:44 AM.